


RLC-xxx Instruction Manual



Overview

The RLC-xxx are cover plate kits for two, three, six, seven and ten button wireless keypads. Combining the RLC-xxx with an appropriate keypad creates a hand-held control panel.

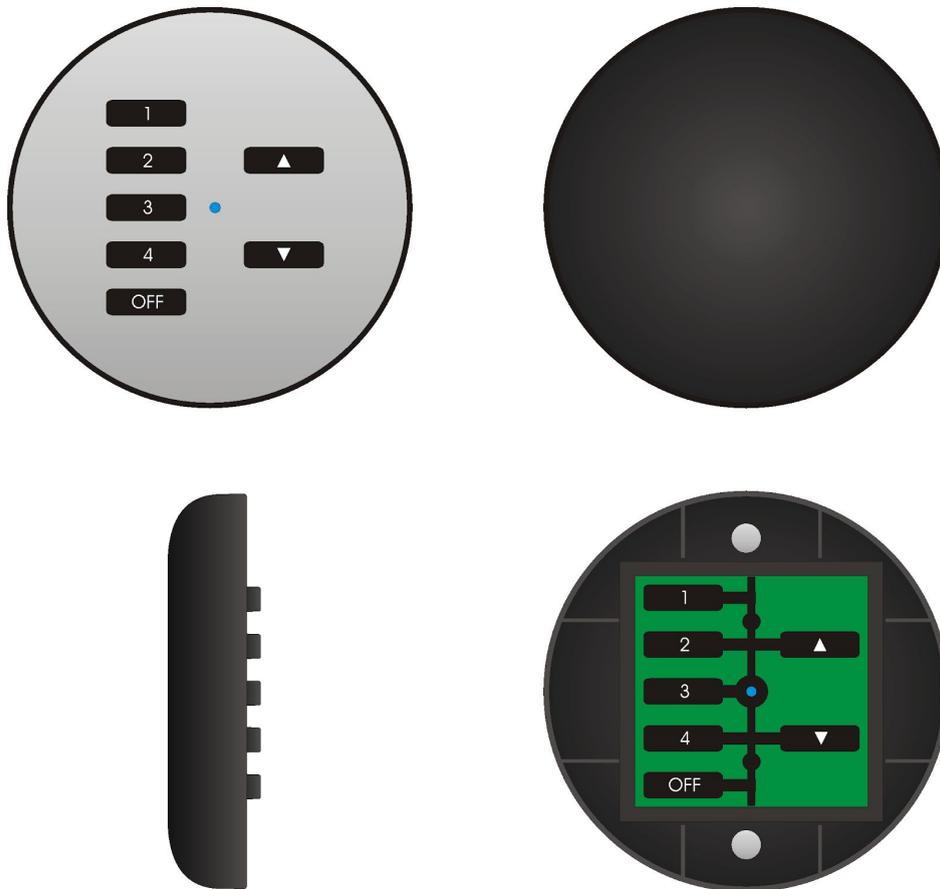

RLC-070 - Seven button

For use with: RCM070, RNC070, RCM071, RCM072, RCM-Audio

RLC-100 - Ten button

For use with: RCM-100, RNC100, RCM-101, RCM-102, RCM103

RLC-020 - Two button

For use with: RCM020, RNC020

RLC-030 - Three buttons

For use with: RCM030

RLC-060 - Six buttons


For use with: RCM060

Installation


When delivered the RLC-xxx should have a small plastic pullout tab. This allows easy removal of the cover plate during the initial setup of the handheld remote.

When inserting the keypad into the RLC-xxx it is important that it is oriented correctly. The diagonal arrow should always be pointed towards the top of the keypad.

**Magnets are
Horizontal:**
RLC060
RLC100

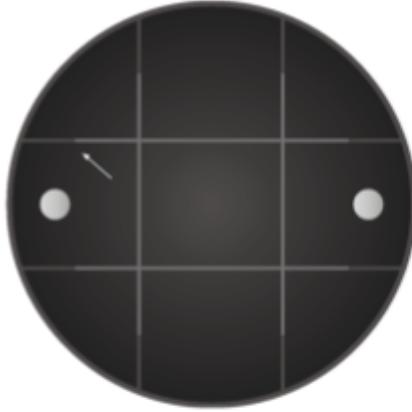

**Magnets are
Vertical**
RLC020
RLC030
RLC070

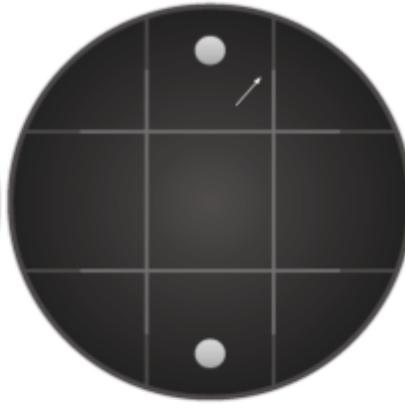

Small slots are provided in the webs around the inner perimeter of the case to locate the aerial.


NB

Care must be taken to keep the aerial in the grooves. If the aerial is not seated correctly or trapped under the RCM/RNC keypad the front plate will not be able to be secured correctly.

Servicing the RLC

If after using the pullout tab access to the RCM or RNC is required use the method below.

The base of the RLC case has three small feet, one of which has a small hole in the centre. To remove the front plate push a small pin or straightened paper clip through the hole to break the grip of the retaining magnets.

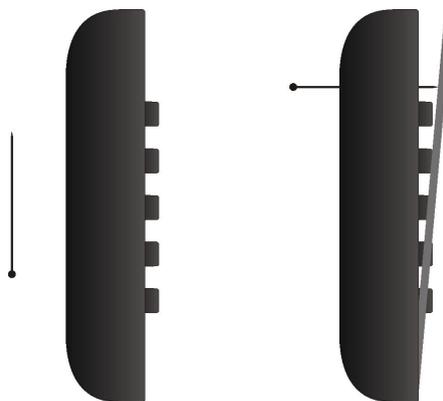

Rako thanks you for having purchased a Rako product and hopes that you are pleased with your system. Should for any reason you need to contact us please contact us via our website www.rakocontrols.com or by phoning our customer help line on 01634 226666.

